





Instr. No. 2650-824B

NOTE

Due to normal manufacturing processes you may have "flashing" (small fibers of plastic) around the pod holes. Once the gauge(s) are installed in the pod you will not be able to see the "flashing."

1. Disconnect Negative battery cable.
2. Remove OEM clock pod by pushing up on the top lip.
This will release the pod clips.
3. Remove clock wiring and insulate wires properly.
4. Insert Lower Mounting Plate (see illustration) in dash hole with Threaded Stud extending vertically out of hole. **DO NOT DROP PLATE OR LET PLATE FALL IN HOLE.**
5. Insert Threaded Stud in hole of Upper Mounting Plate.
6. Start Nut on Threaded Stud and tighten Nut secure. (**DO NOT OVER TIGHTEN NUT! THIS MAY CAUSE DAMAGE TO DASH BOARD.**)
7. Start Nylon Locknut on Threaded Stud. Do not tighten it.
8. Insert wires from one gauge through one of the gauge holes.
9. Carefully press gauge in hole (It will be a tight fit). Press gauge in until bezel is secure with face plate of Dash Pod.
10. Insert wires from second gauge through remaining gauge hole. (Do not press gauge in hole.)
11. Insert wires from both gauges through hole in dash.

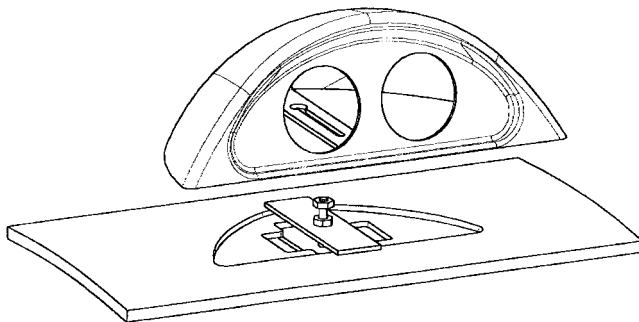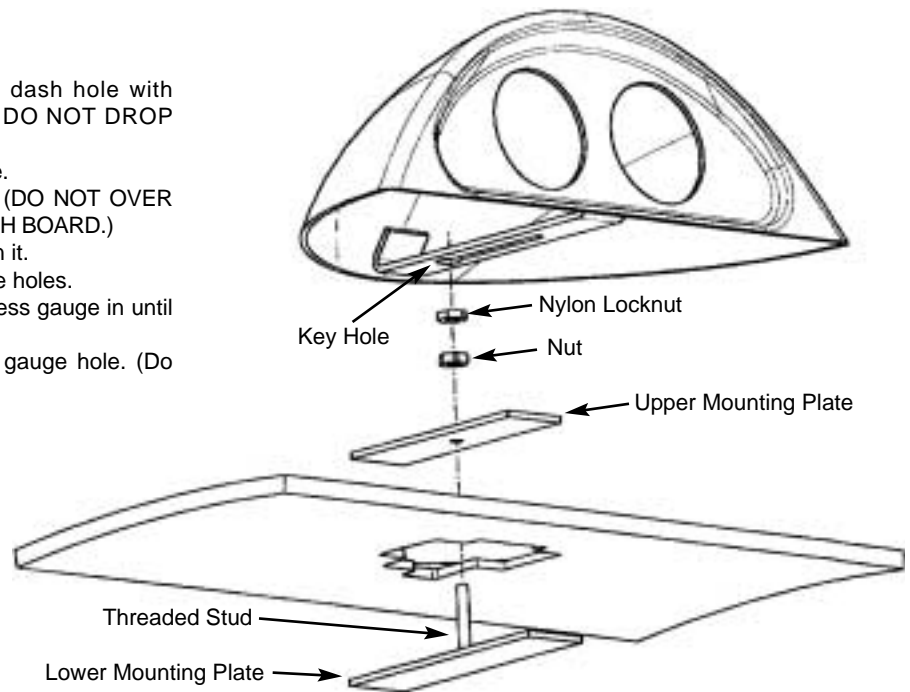

Dash Pod ready to be placed on Threaded Stud

12. Insert Threaded Stud and Nylon Locknut through Dash Pod's, Key Hole (see illustration).
13. Place Dash Pod in position.
14. Tighten Locknut until snug. (**DO NOT OVER TIGHTEN NUT! THIS MAY CAUSE DAMAGE TO DASH BOARD AND NUT**)
15. Carefully press second gauge in hole (It will be a tight fit). Press gauge in until bezel is secure with face plate of Dash Pod.
16. Wire gauges according to instructions supplied with gauge.
17. Reconnect Negative battery cable.

Auto Meter Gauge Works Three Year Limited Warranty

Gauge Works warrants to the consumer that all Auto Meter Gauge Works products will be free from defects in material and workmanship. Products that fail will be repaired or replaced at Auto Meter Gauge Works' option to the consumer, when determined by Auto Meter Gauge Works that the product failed due to defects in material or workmanship. This warranty is limited to the repair or replacement of parts in the Auto Meter Gauge Works Product and the necessary labor done by Auto Meter Gauge Works to effect the repair or replacement of the Auto Meter Gauge Works product. In no event shall this warranty exceed the original purchase price of the Auto Meter Gauge Works product nor shall Auto Meter Gauge Works be responsible for special, incidental or consequential damages or costs incurred due to the failure of this product. Warranty claims to Auto Meter Gauge Works must be transportation prepaid and accompanied with proof of purchase. This warranty applies only to the original purchaser of product and is non-transferable. Improper use or installation, accident, water damage, abuse, unauthorized repairs or alterations voids this warranty. Auto Meter Gauge Works disclaims any liability for consequential damages due to breach of any written or implied warranty on all products manufactured by Auto Meter Gauge Works. This warranty is made solely by Gauge Works with Auto Meter being the agent to contact for warranty claims. If the partnership between Auto Meter and Gauge Works dissolves, then all warranty adjustments will be covered by the Gauge Works Co.